
HOT SPOT[®] COLLECTION QUICKSTART GUIDE

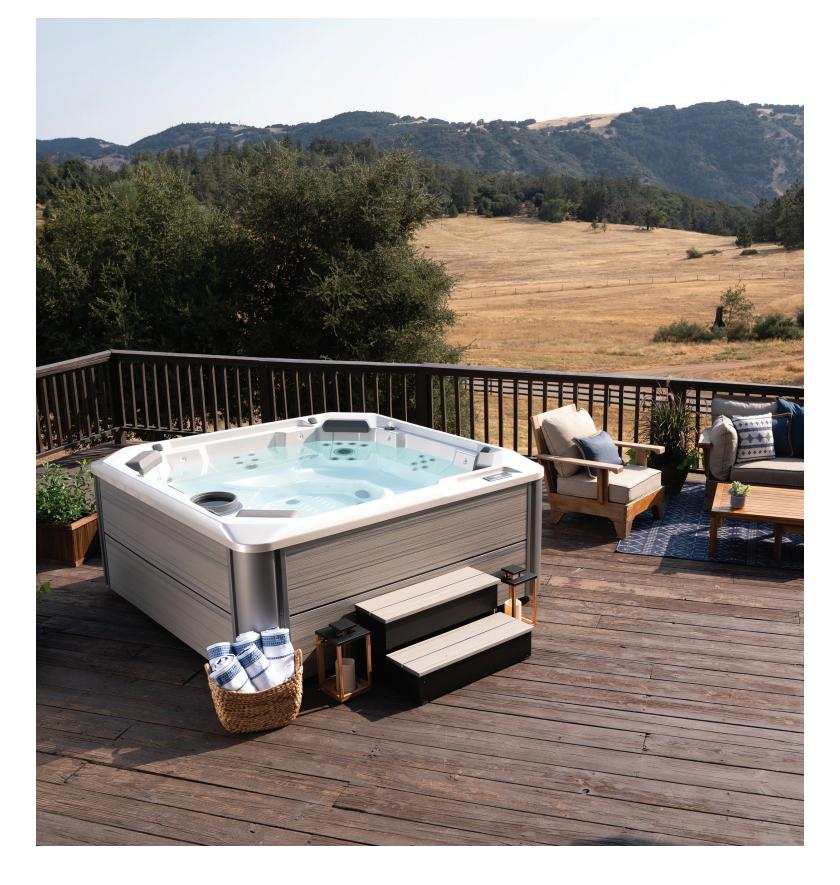



Getting Started with Your Hot Spring[®] Spa

Congratulations on your purchase of a new Hot Spot[®] Collection spa! We are excited to welcome you to the Hot Spring family and look forward to becoming an integral part of your daily routine.

This Quick Start Guide is intended to help you set up your hot tub quickly and easily. Use the camera on your smartphone to scan the QR code below or visit www.hotspring.com to find a digital copy of:

- Your full Owner's Manual, including the safety and electrical guides
- The FreshWater[®] Salt System Start-up Guide and Owner's Manual



Follow this 9-step process to begin experiencing the rejuvenation and vitality that comes from spending time in a Hot Spring spa.

Here's What You'll Need

REQUIRED

- Your chosen water care start-up kit
 (FreshWater Salt System or other water care system)
- FreshWater 5-Way Test Strips
- FreshWater Phosphate Test Strips
- FreshWater Concentrated Chlorinating Granules
- FreshWater pH/Alkalinity Down
- FreshWater pH/Alkalinity Up
- Garden hose

RECOMMENDED

- FreshWater Clean Screen[®] Pre-Filter
- FreshWater Mineral Spa Sanitizer
- FreshWater Vanishing Act[®] pillow or Vanishing Act XL



Follow These 9 Simple Steps

∀ Safely Connect Your Spa

If you haven't already, hire or consult an electrician to safely connect your spa. Your local dealer can suggest local vendors or help with the installation.

🔗 Test Your Fill Water

2

- A. Before filling your spa, take a sample of the water you will use to fill your spa to your local dealer for testing to determine if the water contains high levels of metals, phosphates, and/or calcium.
- **B.** Your local dealer can suggest an appropriate water treatment program for your specific fill water.

3 💧 Fill Your Spa

- A. Close the spa's drain, located in the bottom front of the spa.
- B. Flush out your garden hose before you begin filling your spa.
- C. Fill your spa through the filter compartment, preferably using the FreshWater Clean Screen Pre-Filter hose attachment, until the water level is one inch (2.5 cm) above the highest jet.





Replace the filter compartment cover.

CAUTION: Filling the spa through the basin can result in an airlock and difficulty starting the spa.

🕛 Power On Your Spa

A. After the spa has been filled with water, turn on the power.

4

 115-volt models: Connect the GFCI to the waterproof receptacle and push the RESET button on the GFCI.



- 230-volt models: Open the door of the electrical subpanel and switch on the GFC breakers.
- **B.** Close and secure the subpanel door.

Your Spa

5 🛛 🖉 Set the Water Temperature

- A. Use the control panel to set the temperature to your desired level, which should be at least 95°F (35°C). We recommend temperatures between 100°F (38°C) and 104°F (40°C).
- B. Place the cover on the spa and allow the water to heat up for approximately 24 hours.



6 ♣ Set Up Your Water Care System

- A. Follow the FreshWater[®] Salt System start-up process using either FreshWater Start-Up Guide or FreshWater Owner's Manual.
- **B.** Or follow the directions provided by your dealer for your chosen water care system.

7 🔗 Test the Jets

Check the operation of the jet system and purge any remaining air from the heating system by completing the following steps:


A. Make sure all diverters are set in the middle.

on all jet pumps, as explained

in the "Using the Control Panel"

B. Use the control panel to turn


section of this guide.

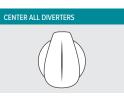

- C. Confirm each jet is working properly by checking both low and high speed (if applicable). Properly working jets are indicated by strong, non-surging water flow. If jets are surging, turn them off, wait five seconds, and turn them back on.
- **D.** Cycle through all diverter valves to ensure all systems are flushed with water.
- E. Turn off all jets.

ا کُوُ 🖌 8 Balance Your Water

- A. Dip a FreshWater 5-Way
 - Test Strip into the water for two seconds, remove, and shake once, then compare the strip to the scale on the side of the test strip bottle to test the pH, alkalinity, calcium, and chlorine levels.

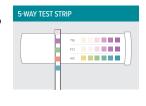

- B. Adjust the levels as needed to bring your water within the target levels. Refer to your spa's Owner's Manual or the FreshWater Salt System Owner's Manual for more detailed information on how to balance your water.
- C. Target levels:
 - Total alkalinity (TA) 40–120 ppm
 - pH between 7.2–7.8
 - Calcium hardness
 - 25–75 ppm for salt spas
 - 50–150 ppm for non-salt spas
 - Free chlorine 1–5 ppm

*Chlorine range and target may vary by country. Consult local authority.

9 🛛 🚨 Sanitize Your Water

- A. Shock and clean your water to achieve an initial 5 ppm chlorine reading using FreshWater Concentrated Chlorinating Granules (dichlor). If using a liquid chlorine, do not use a scented or non-splash product.
- B. Ranges will be dependent on your chosen water care option and/or country. For more specifics on water sanitization, contact your dealer or review the FreshWater Salt System Start-Up Guide, Owner's Manual, or the instructions included with your water care system.

Now You're Ready for Your First Soak!

Control Panel instructions on next page \rightarrow

Using the Control Panel

Touch anywhere on the screen to turn on the control panel.



SETTING THE TEMPERATURE

- A. Press the + button to raise the set temperature of the spa. Press and hold to raise the temperature continuously.
- B. Press the button to lower the set temperature of the spa. Press and hold to lower the temperature continuously.

FRESHWATER SALT SYSTEM (OPTIONAL)

If your spa has the FreshWater Salt System installed you can navigate to the screen as follows:

- From the Home screen use the MODE (▲ or ▼) button to scroll to the Salt System Menu.
- Press the (+) button on the control panel to enter into the Salt System menu.
 *See FreshWater Salt System Owner's Manual for system operation and start-up process.

OPERATING THE JETS

Pressing the 🛅 JETS button changes the jet pump function, depending on the number of times you press it.

A. RELAY & RHYTHM

# Presses	Jet Pump Function
One	Two-speed jet pump runs on low speed
Two	Two-speed jet pump runs on high speed
Three	One- and two-speed jet pumps run on high speed
Four	One-speed jet pump runs on high speed
Five	Both jet pumps are off

B. PACE, STRIDE, SX & TX

# Presses	Jet Pump Function
One	Two-speed jet pump runs on low speed
Two	Two-speed jet pump runs on high speed
Three	Jet pump is off

USING THE LIGHTING

A. Press the lightS button to turn all lights on at the highest intensity. Press the lightS button a second time to lower to the medium setting, a third time to lower to the low setting, and a fourth time to shut the lights off.

For all other functions, including system mode, cleaning mode, tool menu, locking features, sleep mode, filter cycles, and audio, please refer to your Owner's Manual.

Maintenance Tips

Protect your investment for years to come with these important tips.

CARE FOR YOUR SPA SHELL AND COVER

- A soft rag should easily remove most dirt from your spa's shell. Most household chemicals are harmful to the shell, especially Windex or anything with citrus.
- Do not allow any items, including children or pets to sit on the cover.
 - Regularly clean and condition your spa cover:
 After rinsing, a very mild soap solution can be used: one teaspoon of dishwashing liquid with one gallon / 4 liters of water.
 - Use water only on the underside of the cover.

WARNING! Protect Your Spa Against Sun Damage

- Be aware of reflections from double-paned windows shining on the spa. These reflections can cause severe damage, including warped panels, a melted cover core, and potentially even fire.
- Direct sunlight on an empty spa can cause the shell to blister. This can happen very quickly, especially with darker shell colors. Always keep the spa cover on when not in use.



WARNING! Filling Your Spa With Cold Water

- If the water used to fill your spa is below 50° F (10° C), the spa may go into High Limit Protection Mode and stop functioning. If the issue does occur, refer to your Owner's Manual or contact your local dealer.
- You may also resolve the issue by blending warm water into your cold fill water to raise the temperature above 50° F (10° C) during the refilling process.



IMPORTANT SAFETY INSTRUCTIONS

READ ALL OF THIS INFORMATION BEFORE USING YOUR SPA

SAFETY INFORMATION

(READ AND FOLLOW ALL INSTRUCTIONS)

AVOIDING THE RISK TO CHILDREN

ADANGER - RISK OF CHILD DROWNING

Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use a spa unless they are supervised at all times.

WARNING

To reduce the risk of injury, do not permit children to use this spa unless they are closely supervised at all times.

- To reduce the risk of injury, lower water temperatures are recommended for young children. Children are especially sensitive to hot water.
- Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use a spa unless they are supervised at all times.

DO:

- Make sure you always lock the child resistant locks after using the spa for your children's safety. Every **Hot Spring** spa is equipped with a locking cover that meets the ASTM F1346-91 Standard for Safety Covers.
- Test the water temperature with your hand before allowing children to enter the spa to be sure that it's comfortable. Children are especially sensitive to hot water.
- Remind children that wet surfaces can be very slippery. Make sure that children are careful when entering or exiting the spa.

DON'T:

- · Allow children to climb onto the spa cover.
- · Allow children to have unsupervised access to the spa.

AVOIDINGTHERISKOFELECTROCUTION <u>ADANGER - RISK OF ELECTROCUTION</u>

- · Connect only to a grounded source.
- Do not bury the power cord. A buried power cord may result in death, or serious personal injury due to electrocution if direct burial-type cable is not used, or if improper digging occurs.
- A ground terminal (pressure wire connector) is provided on the control box inside the unit to permit connection of a minimum No. 8 AWG solid copper bonding conductor between this point and any metal equipment, metal water pipe, metal enclosures of electrical equipment, or conduit within 5 feet (1.5 m) of the unit as needed to comply with local requirements.
- Do not operate the audio main controls while inside the spa (if spa is equipped with an audio component).
- Do not connect any auxiliary components (for example, cable additional speakers, headphones, additional audio components) to the audio

system unless approved by WATKINS WELLNESS .

- Do not self service audio component by opening spa door as this may expose dangerous voltage or other risk of injury. Refer all servicing to qualified service personnel.
- Do not attach an external antennae to a spa audio system unless installed by a licensed electrician in accordance with Article 810 of the National Electric Code, ANSI/NFPA 70.

- To reduce the risk of electrical shock, replace a damaged cord immediately. Failure to do so may result in death or serious personal injury due to electrocution.
- Your spa is provided with a Ground Fault Circuit Interrupter (GFCI) for user and equipment protection. To ensure proper operation of this important safety device, test according to the following instructions per electrical configuration.
- Cord-Connected 115 volt, 15 or 20 amp models: The GFCI is located at the end of the power cord. Before each use, with the unit operating, push the TEST button. The unit should stop operating and the GFCI power indicator will go out. Wait 30 seconds and then reset the GFCI by pushing the RESET button. The GFCI power indicator will turn on, restoring power to the spa. If the interrupter does not perform in this manner, there may be an electrical malfunction and with it, the possibility of an electric shock. Disconnect the power until the problem has been corrected.

<u>230 volt permanently installed or converted models:</u>

- A ground terminal is provided on the terminal block (TB-1, system ground terminal) located inside the control box. To reduce the risk of electric shock, connect this terminal to the grounding terminal of your electrical service or supply panel with a continuous green, insulated copper wire. The wire must be equivalent in size to the circuit conductors supplying the equipment. In addition, a bonding terminal (pressure wire connector) is provided on the outside of the control box for bonding to local ground points. To reduce the risk of electric shock, this connector should be bonded with a No. 8 AWG solid copper wire to any metal ladders, water pipes, or other metal within 5 feet (1.5 m) of the spa to comply with local requirements. The means of disconnection must be readily accessible, but must be installed at least 5 feet (1.5 m) from the spa.
- Your spa is provided with a suitably rated circuit breaker to open all ungrounded supply conductors.
- Your spa uses ground fault circuit interrupters in the electrical subpanel. Before each use of the spa and with the unit operating, push the TEST button on each breaker. The switch should click over to the "Trip" position. Wait 30 seconds and reset each GFCI breaker by switching it completely off and then completely on. The switch should then stay on. If either of the interrupters does not perform in this manner, it is an indication of an electrical malfunction and the possibility of an electric shock. Disconnect the power until the fault has been identified and corrected.

IMPORTANT: Failure to wait 30 seconds before resetting the GFCI may cause the spa's Power Indicator (on the control panel) to blink. If this occurs, repeat the GFCI test procedure.

A DANGER - RISK OF ELECTRICAL SHOCK

- Install at least 5 feet (1.5 m) from all metal surfaces. A spa may be installed within 5 feet (1.5 m) of a metal surface if each metal surface is permanently connected by a minimum No. 8 AWG solid copper conductor attached to the wire ground connector on the terminal box that is provided for this purpose if in accordance with National Electrical Code ANSI/NMFPA70-1993.
- Do not permit any electrical appliances, such as a light, telephone, radio, or television within 5 feet (1.5 m) of a spa. Failure to maintain a safe distance may result in death, or serious personal injury due to electrocution, if the appliance should fall into the spa.
- Install your spa is such a way that drainage is away from the electrical compartment and from all electrical components.

DO:

- Be sure your spa is connected to the power supply correctly use a licensed electrical contractor.
- Disconnect the spa from the power supply before draining the spa or servicing the electrical components.
- Test the Ground Fault Circuit Interrupter before each use.
- Replace audio components only with identical components (if your spa is equipped with an audio component).

DON'T:

- Use the spa with the equipment compartment door removed.
- · Place electrical appliances within 5 feet (1.5m) of the spa.
- Use an extension cord to connect the spa to its power source. The cord may not be properly grounded and the connection is a shock hazard. An extension cord may cause a voltage drop, which will cause overheating of the jet pump motor and motor damage.
- Attempt to open the electrical control box. There are no user serviceable parts inside.

RISKS TO AVOID

▲ DANGER - RISK OF INJURY

- To reduce the risk of injury to persons, DO NOT remove suction fittings (filter standpipes) located in the filter compartment.
- The suction fittings in the spa are sized to match the specific water flow created by the pump. Never replace a suction fitting with one rated less than the flow rate marked on the original suction fitting.
- There is a danger of slipping and falling. Remember that wet surfaces can be very slippery. Take care when entering or exiting the spa.
- · Never operate spa if the suction fittings are broken or missing.
- · People with infectious diseases should not use the spa.
- Keep any loose articles of clothing, long hair, or hanging jewelry away from rotating jets or other moving components.

INCREASED SIDE EFFECTS OF MEDICATION

- The use of drugs, alcohol may cause unconsciousness with the possibility of drowning.
- Persons using medications should consult a physician before using a spa; some medication may cause a user to become drowsy, while other medication may affect heart rate, blood pressure, and circulation.

• Persons taking medications which induce drowsiness, such as tranquilizers, antihistamines, or anticoagulants should not use the spa.

HEALTH PROBLEMS AFFECTED BY SPA USE

- · Pregnant women should consult a physician before using spa.
- Persons suffering from obesity, or with a medical history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using spa.

UNCLEAN WATER

- Keep the water clean and sanitized with correct chemical care. Maintain the recommended levels for your HOT SPRING spa.
- Refer to Water Quality and Maintenance section in the Owner's Manual for complete instructions.

IMPORTANT: Turn on the jet pump for a least ten minutes after adding ANY spa water chemicals into the filter compartment.

Clean the filter cartridges monthly to remove debris and mineral buildup which may affect the performance of the hydromassage jets, limit the flow, or trip the high limit thermostat, which will turn off the entire spa.

AVOIDING THE RISK OF HYPERTHERMIA

Prolonged immersion in hot water can result in HYPERTHERMIA, a dangerous condition which occurs when the internal temperature of the body reaches a level above normal 98.6°F (37°C). The symptoms of hyperthermia include unawareness of impending hazard, failure to perceive heat, failure to recognize the need to exit the spa, physical inability to exit the spa, fetal damage in pregnant women, and unconsciousness resulting in a danger of drowning.

The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia in hot tubs and spas.

TO REDUCE THE RISK OF INJURY

- The water in the spa should never exceed 104°F (40°C). Water temperatures between 100°F and 104°F (36°C and 40°C) are considered safe for a healthy adult. Lower water temperatures are recommended for extended use (exceeding ten minutes) and for young children. Extended use can cause hyperthermia.
- Pregnant or possibly pregnant women should limit spa water temperatures to 100°F (36°C). Failure to do so may result in permanent injury to your baby.
- · Do not use spa immediately following strenuous exercise.

AVOIDING THE RISK OF SKIN BURNS

- To reduce the risk of injury, before entering a spa the user should measure the water temperature with an accurate thermometer.
- Test the water with your hand before entering the spa to be sure it's comfortable.

SAFETY SIGN

Each **HOT SPRING** spa is shipped with a SAFETY SIGN in the owner's package. The sign, which is required as a condition of Product Listing, should be permanently installed where it is visible to the users of the spa. To obtain additional SAFETY SIGNS, contact your **HOT SPRING** dealer and request Part #70798.

IMPORTANT SPA INSTRUCTIONS

The following contains important spa information, and we strongly encourage you to read and apply them.

DO:

- Use and lock the vinyl cover when the spa is not in use, whether it is empty or full.
- Follow the Spa Care and Maintenance recommendations stated in this manual.
- Use only approved accessories and recommended spa chemicals and cleaners.

DON'T

- Leave the HOT SPRING spa exposed to the sun without water or the cover in place. Exposure to direct sunlight can cause solar distress of the shell material.
- · Roll or slide the spa on its side. This will damage the siding.
- Lift or drag the vinyl cover by using the cover lock straps; always lift or carry the cover by using the handles.
- Attempt to open the electrical control box. There are no user serviceable parts inside. Opening of the control box by the spa owner will void the warranty. If you have an operational problem, carefully go through the steps outlined in the Troubleshooting section. If you are not able to resolve the problem, contact your authorized HOT SPRING dealer. Many problems can easily be diagnosed over the telephone by an Authorized Service Technician.

SPA SHELL

Your **HOT SPRING** spa has an acrylic shell. Stains and dirt generally will not adhere to your spa's surface. A soft rag should easily remove most dirt. Most household chemicals are harmful to your spa's shell (see below for detailed information on cleaning agents). Always rinse off any spa shell cleaning agent with fresh water.

IMPORTANT:

- The following products are the ONLY approved cleaning agents for your HOT SPRING spa shell: plain water, HOT SPRING FRESHWATER Spa Shine, or Soft Scrub[®]. The use of alcohol or any other household cleaner other than those listed to clean the spa shell surface is NOT recommended. DO NOT use any cleaning products containing abrasives or solvents since they may damage the shell surface, specifically: Simple Green[®], Windex[®] or Spa Mitt. NEVER USE HARSH CHEMICALS! Damage to the shell by use of harsh chemicals is not covered under the warranty. Always rinse off any spa shell cleaning agent with fresh water.
- Iron and copper in the water can stain the spa shell if allowed to go unchecked. Ask your HOT SPRING dealer about a Stain and Scale Inhibitor to use if your spa has a high concentration of dissolved minerals. Watkins recommends FRESHWATER Stain & Scale Defense.
- 3. Keep all cleaners out of the reach of children and use care when applying.

SAVE THESE INSTRUCTIONS

HOTSPOT

ELECTRICAL INFORMATION (TO BE USED BY ELECTRICIANS)



ELECTRICAL INFORMATION

ELECTRICAL REQUIREMENTS

IMPORTANT: Fill the spa with water before turning on the power.

Your **HOT SPRING** spa has been carefully designed to give you maximum safety against electrical shock. Connecting the spa to an improperly wired circuit will negate many of the spa's safety features. Improper wiring may also cause electrocution, risk of fire, and other risks of injuries. Please read and follow the electrical installation requirements and instructions for your specific spa model completely!

- The TX operates on 115 volts 15 amp 60Hz. This model can also be converted to 230 volt 50 amp.
- The **PACE**, **STRIDE** & SX operate on 115 volts 20 amp 60 Hz. These models can also be converted to 230 volt 50 amp.

When the TX, **PACE**, **STRIDE** & SX are connected to 115 volts 15 amp or 20 amp, the heater will provide approximately 1000 watts of heat, only when the pump is operating in LOW speed and the thermostat is calling for heat. When these spas are connected to 115 volts 30 amp, the heater will provide approximately 1000 watts of heat when the pump is operating in LOW or HIGH speed and the thermostat is calling for heat. When these spars are connected to 230 volts 50 amps, the heater will provide approximately 4000 watts of heat when the pump is operating in LOW or HIGH speed and the thermostat is calling for heat. When these spars are connected to 230 volts 50 amps, the heater will provide approximately 4000 watts of heat when the pump is operating in LOW or HIGH speed and the thermostat is calling for heat.

• The **RELAY** and **RHYTHM** models require a dedicated 230 volt power supply.

230 VOLT PERMANENTLY CONNECTED MODELS

(RELAY & RHYTHM only)

HOT SPRING spas must be wired in accordance with all applicable local electrical codes. All electrical work should be done by an experienced, licensed electrician. We recommend the use of

appropriate electrical conduit, fittings, and wire for all circuits.

The diagram below illustrates how to wire 230 volt permanently connected spa models:

- An electrical subpanel containing a GFCI breaker is included with each 230 volt spa. We recommend that this subpanel be used to supply power to the spa.
- The subpanel requires a 50 amp, single phase, 230 volt, four wire service (two line, one neutral, one ground). The grounding conductor must not be less than #10 AWG. Refer to local codes and to NEC 250-122 table.
- Mount the subpanel in the vicinity of the spa, but not closer than five feet away, in accordance with all local codes. (N.E.C. 680-38 to 41-A-3)


Once your spa has been filled with water, turn it on and test all of the circuit breakers.

IMPORTANT: If the breaker immediately trips, verify that the wires are correctly connected. The breaker should be tested prior to each use. Here's how:

- 1. Push the "TEST" button on the GFCI breaker, and observe it click OFF.
- Wait 30 seconds, then push the breaker switch to the OFF (down) position (to ensure that it has completely disengaged), then push the breaker switch to the ON (up) position. If you don't wait 30 seconds, the spa's power indicator may continue to blink – try again.

If the GFCI breaker fails to operate in this manner, your spa may have an electrical malfunction, and you may be at risk of electrical shock. Turn off all circuits and do not use the spa until the problem has been corrected by an authorized service agent.

WARNING: Removing, or bypassing any GFCI breaker will result in an unsafe spa and will void the spa's warranty.

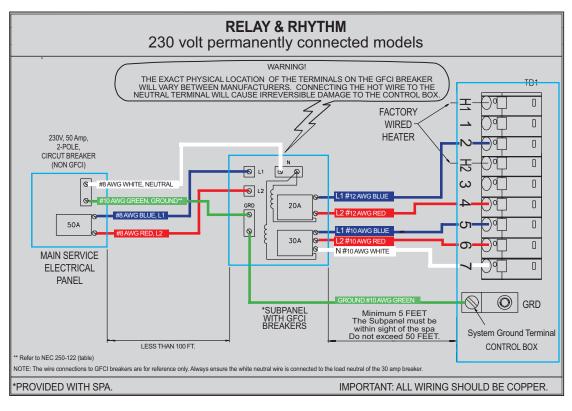



GFCI PACE, STRIDE, SX & TX

The Ground Fault Circuit Interrupter (GFCI) is a safety device that is designed to detect as little as 5 milliamps (\pm 1mA) of electrical current leakage to ground. **WATKINS WELLNESS** recommends that the GFCI be tested prior to each use to ensure it is functioning correctly. With the

spa connected to the power supply, push the "Test" button. The spa should stop operating and the GFCI power indicator will go out. Wait 30 seconds and then reset the GFCI by pushing the Reset button. The GFCI power indicator will turn on, restoring power to the spa. If the interrupter does not perform in this manner, it is an indication of an electrical malfunction and the possibility of an electric shock. Disconnect the plug from the receptacle until the fault has been identified and corrected.



IMPORTANT: Never use the GFCI as a means to disconnect power to the spa (always unplug it). If the GFCI is tripped while the spa is plugged in, and a power outage occurs, when power returns the GFCI will automatically reset and power will flow to the spa.


115 VOLT OPERATION (60Hz ONLY)

The spa must be connected to a dedicated 115 volt, 15 or 20 amp, GFCI protected, grounded circuit. The term "dedicated" means the electrical circuit is not being used or shared for any other electrical items (patio lights, appliances, garage circuits, etc.). If the spa is connected to a non-dedicated circuit, overloading will result in "nuisance tripping" at the main panel. This requires frequent resetting of the breaker switch at the house electrical breaker panel and introduces the possibility of damage or failure of spa equipment.

NEVER CONNECT THE SPA TO AN EXTENSION CORD!

A pressure wire connector is provided on the exterior surface of the

control box, inside the spa. This is to permit the connection of a ground bonding wire between this point and any metal equipment, enclosures, reinforced concrete pad, pipe, or conduit within 5 feet (1.5 m) of the spa (if needed to comply with local building code requirements). The bonding wire must be at least a #10-AWG solid copper wire.

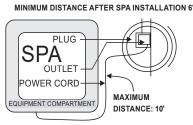

Bond the spa to all exposed metal equipment or fixtures, handrails, and concrete pad per N.E.C. Article 680 and all local codes.

INSTALLATION INSTRUCTIONS

All 115 volt spa models come equipped with approximately 15 feet (15 m) of useable power cord (this is the maximum length allowed by Underwriters Laboratory and the National Electric Code). When the spa is installed, the power cord will come out of the bottom of the equipment compartment door. For your safety, when the electrician is installing the single electrical outlet and waterproof cover, the outlet should be no closer than 5 feet (1.5 meters) and no farther than 10 feet from the spa [reference National Electrical Codes.

The Ground Fault Circuit Interrupter (GFCI) is located at the end of the power cord. This device is for your protection. It is very important to protect it from rain and other moisture. Test once a month, with the plug connected to the power supply,

- 1. Push the "TEST" button on the GFCI breaker. The spa should stop operating and the GFCI power indicator will go out.
- 2. Wait 30 seconds, then push the "RESET" button. Power will be restored to the spa and the GFCI power indicator will turn on.

If the GFCI fails to operate in this manner, your spa may have an electrical malfunction, and you may be risking electrical shock. Turn off all circuits and do not use the spa until the problem has been corrected by an authorized service agent.

WARNING: Removal of the GFCI from the spa's power cord will result in an unsafe spa and will void the spa's warranty.

IMPORTANT: Should you ever find the need to move or relocate your **HOT SPRING** spa, it is essential that you understand and apply these installation requirements. Your **HOT SPRING** spa has been carefully engineered to provide maximum safety against electric shock. Remember, connecting the spa to an improperly wired circuit will negate many of its safety features.

ADVANTAGE TO HAVING YOUR SPA CONVERTED

- In the 115 volt configuration, either the heater, or the jet pump can operate, but they can't work at the same time. In a 115 volt system, as long as the jet pump is activated, the heater will not turn on. On the other hand, when the spa is converted to operate in the 230 volt configuration, the heater and jet pump can operate simultaneously.
- The heater will operate at 1000 watts when the spa is configured as a 115 volt cord-and-plug connected model, and at 4000 watts when the spa is configured as a 230 volt converted model heating your spa water faster.

115/230 VOLT CONVERTIBLE MODELS

The **PACE**, **STRIDE**, **SX & TX** models can be converted to 230 volt operation with the addition of a subpanel and a control box wiring change. Consult your dealer before attempting to convert from 115 volt operation to 230 volt operation. Any damage to the spa from improper conversion is not covered under the warranty.

230 VOLT CONVERSION

HOT SPRING spas must be wired in accordance with all applicable local electrical codes. All electrical work should be done by an experienced, licensed electrician. We recommend the use of appropriate electrical conduit, fittings, and wire for all circuits.

Refer to the following instructions to convert from 115 volt to 230 volt


IMPORTANT: Converting the spa to 230 volt operation will require both an authorized **HOT SPRING** service agent and a qualified electrician. Required Part: A 50A Subpanel with 20A & 30A breakers (for 230 volt Convertable) available from your **HOT SPRING** dealer.

- 1. Disconnect the power cord from the house receptacle.
- 2. Open the equipment compartment door.
 - 3. Remove the screws on the front of the spa control box.
 - 4. Open the control box cover.
 - 5. Identify Terminal block located in the lower left-hand corner inside the control box.




HotSpring[®] ELECTRICAL INFORMATION

- 1. Refer to illustration, Step 1. Remove the 2 pin jumper attached to terminals 4 and 5.
- 2. Refer to illustration, Step 1. Remove the wire jumper from terminals 2, and 6.
- 3. Refer to illustration, Step 2. Remove the power cord wires from 5.7 and GRD (not illustrated).
- 4. Unscrew the power cord strain relief and remove the power cord from the access hole in the control box.

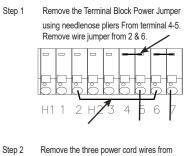

terminal block 5,7 and GRD. Leave Terminal Block Power Jumper 6-7 in place

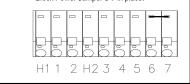

MARNING: Do not allow pliers to contact any electronic components inside the control box.

Converting from 115 volts to 230 volts changes the voltage supplied to the heater from 115-volts to 230 volts. The jet pump will continue to operate at 115 volts.

Have your licensed electrician wire subpanel from a 50A Main Service, then from subpanel into the spa's control box using the following illustration or use the wire diagram on the inside of the control box lid.

IMPORTANT: The subpanel must be placed in sight of the spa, at a minimum distance of 5 feet away.

WIRING CONNECTIONS

IMPORTANT: Fill the spa with water before turning on the power

· Once your spa has been filled with water, turn it on and test all the circuit breakers.

Each breaker should be tested prior to each use. Here's how:

- 1. Push the "TEST" button on each GFCI breaker, and observe it click off
- Wait 30 seconds, then push the breaker switch to the OFF (down) 2. position (to ensure that it has completely disengaged), then push the breaker switch to the ON (up) position. If you don't wait 30 seconds, the spa's power indicator may continue to blink - try again.

If any of the GFCI breakers fails to operate in this manner, your spa may have an electrical malfunction, and you may be risking electrical shock. Turn off all circuits and do not use the spa until the problem has been corrected by an authorized service agent.

IMPORTANT: Service Technician must reconfigure spa using the soft jumpers to allow spa heater to run concurrent with jet pump.

