



TRI-X[®] FILTER CLEANING GUIDE



CLEANING GUIDE

TRI-X® FILTER

Table of Contents

Filter Cleaning Guide_____1	Filter Cleaning Guide_____5
Tools required	Deep clean (optional)
Filter Cleaning Guide_____2	Filter Cleaning Guide_____5-6
Turn off power to hot tub	Check for damaged filter
Locate filter in spa	Insert filter into spa
	Turn on power to hot tub
Filter Cleaning Guide_____3	
Remove filter from spa	Filter Maintenance_____6
Remove large debris	Regular filter maintenance
Rinse filter cartridge	
Filter Cleaning Guide_____4	
Rinse filter cavities	
Plunge filter cartridge	

TOOLS REQUIRED



Garden Hose



Spray Nozzle



5 Gallon (19L) Bucket

FILTER CLEANING GUIDE

1

Turn off Power to Hot Tub

A. Use the topside control panel to turn on spa functions (Figure 1.1).

Figure 1.1



B. Turn off power to the hot tub by going to the disconnect switch or the spa panel, and flip the break to the “off” position (Figure 1.2).

Figure 1.2



2

Locate Filter in Spa

A. Locate the filter lid, open it, and put the filter lid aside (Figure 2.1).

B. Remove the filter cap located at the top of each filter (Figure 2.2).

C. Remove the filters one at a time.

IMPORTANT

Start with the circulation pump filter, identified by the gray filter cap. This is the most important filter to clean.

Figure 2.1



Figure 2.2



NOTE

It is recommended to rotate filters so that after each cleaning a different filter is being used on the circulation pump location inside filter compartment.

FILTER CLEANING GUIDE

3

Remove Filter from Spa

Carefully pull out the filter cartridge and set it aside on a clean surface (Figure 3.1).

Figure 3.1



4

Remove Large Debris

Manually remove any large debris (twigs, leaves, pine needles, etc) that can easily be removed from filter grates (Figure 4.1).

Figure 4.1



5

Rinse Filter Cartridge

NOTE

Avoid using a pressure washer as it may damage the filter.

NOTE

Pay extra attention to the side openings - spray inside each vertical opening to remove dirt and other contaminants.

A. Flip the filter so that the bottom side is up. Remove the cap by rotating it counterclockwise until loose, remove, and set it aside (Figure 5.1).

B. Flip the cartridge over so that the bottom side is down (Figure 5.2)

C. Hold the cartridge vertically and spray between the vertical side openings. Make sure to spray from top to bottom (Figure 5.2).

D. Rotate the cartridge as you spray to ensure all sides are cleaned (Figure 5.2).

Figure 5.1


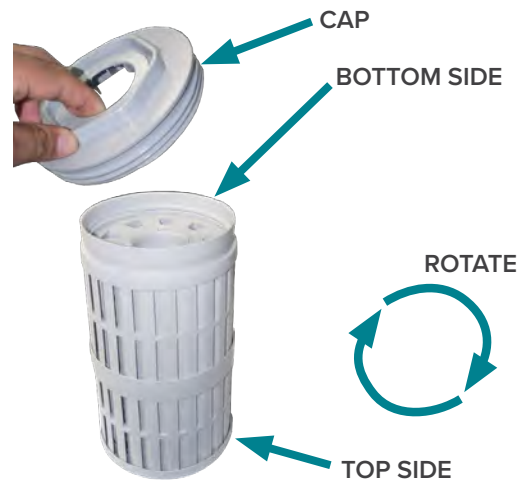


Figure 5.2

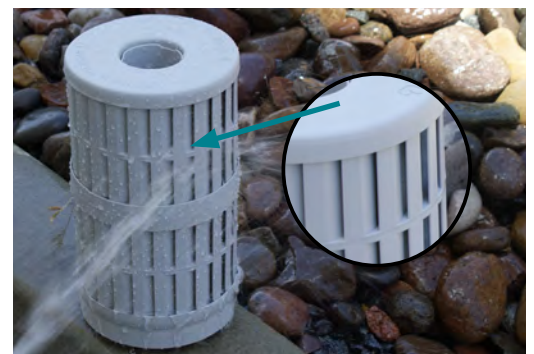

FILTER CLEANING GUIDE

6

Rinse Filter Cavities

A. Flip filter cartridge so that the bottom side is facing up to where the nine cavities are visible. (Figure 6.1).

B. Identify the nine cavities next to the center tube and rinse with garden hose with spray nozzle (Figure 6.1).

C. Make sure to spray all nine cavities with water (Figure 6.2).



Figure 6.1



Figure 6.2

7

Plunge Filter Cartridge

A. Fill a 5 gallon (19L) bucket with clean water up to 3/4 full.

B. Holding your filter with both hands submerge filter bucket in and out of the water with rapid motion (Figure 7.1, Figure 7.2). Do this 10 times.

C. Change the water and repeat the process if the water becomes dirty.



Figure 7.1



Figure 7.2

FILTER CLEANING GUIDE

8

Deep Clean (Optional)

A. Fill a 5 gallon (19L) bucket with clean water up to 4 gallons (15L) full.

B. Add FreshWater® filter cleaning product or a suitable substitute recommended by your dealer. Follow instructions on Filter Cleaning product used.

C. Submerge filter cartridge into the bucket full of FreshWater® cleaning solution (Figure 8.1).

D. Let your filter cartridge soak in the bucket for several hours or overnight.

E. Thoroughly rinse the filter with a hose until no noticeable residue of filter cleaner remains (no suds) (Figure 8.2).

NOTE

Filter cleaners often produce soap-like suds when rinsed. Ensure you rinse thoroughly, as it may take multiple rinses to completely remove all suds.

NOTE

Filter cannot be cleaned in dishwasher.

Figure 8.1



Figure 8.2




9

Check for Damaged Filter

A. Check for any signs of damage: cracks, discoloration, or any other visible damage (Figure 9.1).

B. If it's damaged, replace the filter instead of reinstalling (Figure 9.1).

Figure 9.1

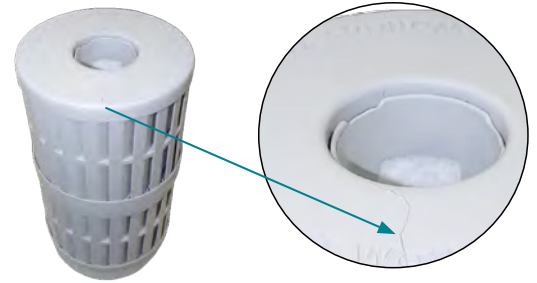

10

Insert Filter into Spa

A. Reapply bottom cap to filter and rotate the filter with the cap facing down (Figure 10.1).

B. Place the filter cartridge in the spa filter compartment (Figure 10.2).

C. Secure the filter to stand-pipe with the filter cap (Figure 10.2).

Figure 10.1

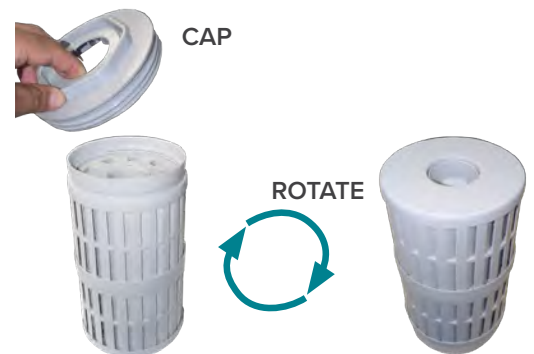


Figure 10.2



FILTER CLEANING GUIDE

11

Turn on Power to Hot Tub

A. Go to the disconnect switch or spa panel and flip the breaker to the “on” position (Figure 11.1).

B. Use the topside control panel to turn on spa functions (Figure 11.2).



Figure 11.1



Figure 11.2



Regular Filter Maintenance

Regular monthly cleaning will extend the life of the filter. When cleaning the filters, inspect for signs of wear and tear. If it is discolored or worn, it may need to be replaced. See filter comparison below.

NORMAL
FILTER



NEED TO
REPLACE
FILTER





WatkinsWellness®

Feel good. Live well.™

Important: Watkins Wellness reserves the right to change specifications or design without notification and without incurring any obligation.

Watkins Wellness
1280 Park Center Drive
Vista, California 92081
USA

© 2026 Watkins Wellness and FreshWater are trademarks of Watkins Wellness registered in the U.S., Canada, CTM and other countries.