

Congratulations on your decision to enjoy the finest spa available. Welcome to the growing family of Hot Spot[®] Spa owners.

Pre-Delivery Instructions

Please take the time to read this booklet carefully, as it will provide you with the information you will need to ensure the safe, secure, and timely installation of your new spa. The following sections are guidelines on how to prepare for delivery and set-up of your new spa. Specifically covered are site selection, delivery access, ground preparation, and electrical requirements.

Remember to carefully read the Owner's Manual that accompanies your spa, and to complete the warranty register within 10 days of delivery. These items, along with other valuable information, will be found in the Owner's Package which has been placed in the equipment compartment of your spa, where you will also find its serial number.

Watkins Manufacturing Corporation reserves the right to change features, specifications and design without notification and without incurring any obligation.

DATE PURCHASED:	Register your warranty
DATE INSTALLED:	using the QR code below
DEALER:	
ADDRESS:	
TELEPHONE:	

In most cities and counties, permits will be required for the installation of electrical circuits or the construction of exterior surfaces (decks and gazebos). In addition, some communities have adopted residential barrier codes which may require fencing and/or self-closing gates on the property to prevent unsupervised access to a pool (or spa) by children under 5 years of age. Your Hot Spot spa is equipped with a locking cover that meets the ASTM F1346-91 Standard for Safety Covers and as a result, is usually exempt from most barrier requirements. As a general practice, your local Building Department will inform you of any applicable barrier requirements at the time a permit is obtained for the installation of an electrical circuit. Your Hot Spot dealer can provide information on which permits may be required.

Hot Spot Spa Pre-Delivery Instructions

SITE SELECTION AND PREPARATION

IMPORTANT: Site selection and preparation are your responsibility. Carefully read these instructions and consult your authorized Hot Spot[®] dealer if you have any questions.

You probably have a spot picked out for your new spa, whether it's indoors or outdoors, on a patio or on a deck. Just make sure you check the following:

- Always put your spa on a structurally sound, level surface. A filled spa can weigh a great deal. Make certain that the location you choose can support the weight of your filled spa.
- Locate your equipment compartment, which houses all of the electrical components, in a place where
 water will drain away from it. Allowing water into the equipment compartment can damage the electronics,
 or may result in tripping your house's circuit breaker.
- Leave yourself easy access to the circuit breakers in the subpanel (when connected to 230 volts), or to the interrupter switch by the end of the power cord (115 volt models).
- Never let water get into the subpanel (when connected to 230 volts), into the interrupter switch (115 volt models), or into the electrical outlet that your spa is plugged into.
- Leave access to the entire front of the spa (the removable panels provide access to the spa's equipment) for periodic spa care and maintenance.

OUTDOOR AND PATIO INSTALLATION

No matter where you install your new spa, it's important that you have a solid foundation to support it. Structural damage to the spa resulting from incorrect installation or placement on an inadequate foundation is not covered under the spa's limited warranty.

If you install the spa outdoors, a reinforced concrete pad at least four inches thick is recommended for your Hot Spot Spa. The reinforcing rod or mesh in the pad should be attached to a bond wire.

If you place the spa on the ground, even temporarily, place stepping stones under the leveling areas. The stones should be at least two inches thick and twelve inches square. Even with stones in place, the spa will inevitably settle and become unlevel. Plus, a spa surrounded by dirt or grass will soon be filled with dirt or grass from users' feet; therefore, it is important to get it onto a solid foundation as soon as possible.

DECK INSTALLATION

To be certain your deck can support your spa, you must know the deck's maximum load capacity. **Consult a qualified building contractor or structural engineer before you place the spa on an elevated deck or indoors.** To find the weight of your spa, its contents and occupants, refer to the Spa Specification chart located toward the end of this document. This weight per square foot must not exceed the structure's rated capacity, or serious structural damage could result.

INDOOR INSTALLATION

Be aware of some special requirements if you place your spa indoors. Water will accumulate around the spa, so flooring materials must provide a good grip when wet. Proper drainage is essential to prevent a build-up of water around the spa. When building a new room for the spa, it is recommended that a floor drain be installed. The humidity will naturally increase with the spa installed. Water may get into woodwork and produce dryrot, mildew, or other problems. Check for airborne moisture's effects on exposed wood, paper, etc. in the room. To minimize these effects, it is best to provide plenty of ventilation to the spa area. An architect can help to determine if more ventilation must be installed.

Page 2

Your Hot Spot dealer can help you with local information such as zoning regulations and building codes.

DELIVERY ACCESS

First, locate the dimensions of your spa on the following chart. The dimensions shown are the measurements of the spa in the vertical position, laid on its side.

Next, contact your dealer to find the height and width added by the delivery cart which the dealer will use to deliver your new spa. Use the height of the cart plus the dimension shown as H to determine the vertical clearance required to pass the spa and cart. Use the width of the cart, or dimension W, whichever is greater, to determine the maximum width of clearance necessary.


NOTE: It may be necessary to allow for additional overhead clearance if the spa will be rolled up or down an incline or moved up or down a short flight of stairs.

Use the information below to determine the requirements for access to your desired location.

It may be necessary to remove a gate, part of a fence, or other movable obstructions in order to roll the spa to its installation site. About ten percent of the time, a crane is the only way to install the spa by lifting it to its final destination.

Model	Width W	Length L	Height H
Tempo [®] (TEM)	38"	89"	89"
Relay® (REL)	36"	84"	84"
Rhythm [®] (RHY)	36"	84"	84"
SX (SX)	33"	72"	72"
TX (TX)	29"	68.5"	68.5"

If the spa has to be taken off of the cart to go over a wall (either because the entry area is too narrow, the eaves are too low, the corner is too tight, or the stairway is too steep), a crane will be required. Don't be alarmed!

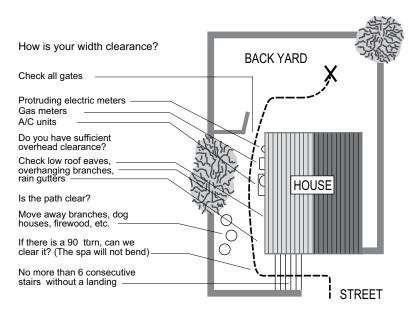

The crane has a truck-mounted boom which can fit right in your driveway. It is run by a licensed and insured operator. For a charge, the crane operator will lift your spa over walls, buildings, or any other obstruction and place it as close to the installation site as possible. The Hot Spot[®] spa delivery personnel will supervise the crane delivery and complete the spa installation. Crane delivery typically takes an average of 30 minutes to complete.

NOTE: If your spa delivery requires the use of a crane, you may be required to pay for its services at the completion of the delivery.

GROUND PREPARATION

Your Hot Spot spa has been engineered to perform on all kinds of common yard surfaces. While a concrete slab is best for long-term use*, other foundations are acceptable so long as a level base is prepared prior to delivery. Three foundation base pictures, shown at right, represent examples of alternatives to a concrete slab for spas installed without gazebos or other accessories.

*NOTE: A reinforced concrete pad at least four inches thick or structurally sound deck able to support the "dead weight" found in the spa specification chart is recommended for your Hot Spot spa.


INSTALLATION NOTES:

- If stepping stones or railroad ties are selected for the spa foundation, they should be placed at the designated leveling areas of your spa to maintain even distribution of the spa weight.
- It is important to note that soft surfaces, even when stepping stones are used to distribute the weight of the spa as evenly as possible, will still have a tendency to settle unevenly, resulting in an unlevel spa.
- Remember, placing the spa on grass or dirt may increase the amount of debris which is inadvertently brought into the spa water on the user's feet.


If you are purchasing a deck package or a gazebo with your spa, a solid foundation becomes mandatory. Placing them on any surface other than a single level pad could create problems with their installation. Pictured at right are a few of the recommended surfaces.

As a homeowner, it is your responsibility to provide a suitable, level foundation for your spa. Keep in mind that most delivery crews are not equipped to level and prepare spa sites.

If you are interested in having a concrete slab, brick surface, or wood deck installed, your Hot Spot dealer should be able to suggest a qualified, licensed contractor.

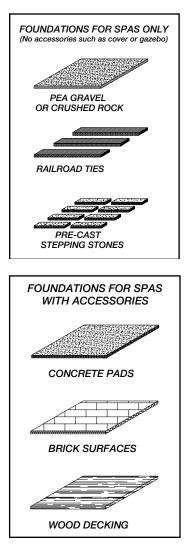



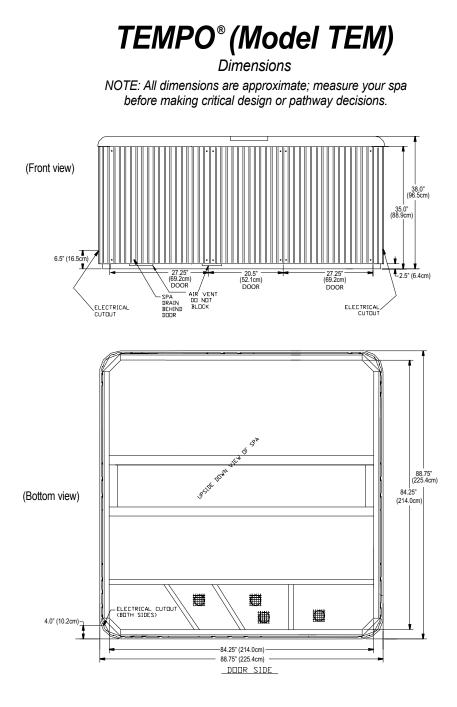

NOTE: Watkins Manufacturing Corporation recommends that the Tempo be installed on a minimum 4" (10.2cm) thick reinforced concrete pad or structurally sound deck able to support the "dead weight" found in the spa specification chart.

IMPORTANT: THE TEMPO MUST NOT BE SHIMMED IN ANY MANNER.


Page 5

Pre-Delivery Instructions

RELAY[®]/RHYTHM[®] (Model REL/RHY)

Dimensions

NOTE: All dimensions are approximate; measure your spa before making critical design or pathway decisions.

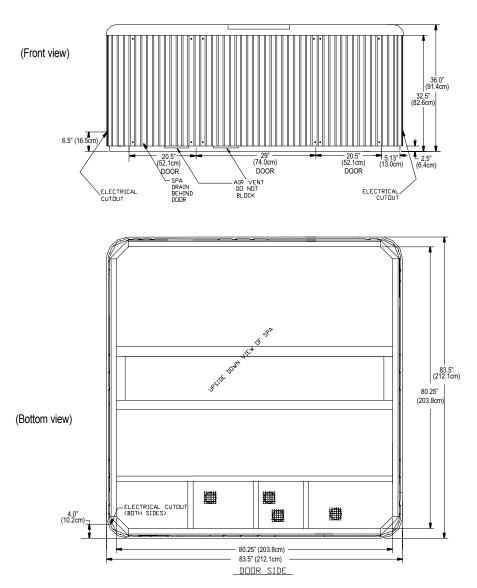

NOTE: Watkins Manufacturing Corporation recommends that the Relay & Rhythm be installed on a minimum 4" (10.2cm) thick reinforced concrete pad or structurally sound deck able to support the "dead weight" found in the spa specification chart.

Page 6


IMPORTANT: THE RELAY & RHYTHM MUST NOT BE SHIMMED IN ANY MANNER.

Pre-Delivery Instructions



Dimensions

NOTE: All dimensions are approximate; measure your spa before making critical design or pathway decisions.

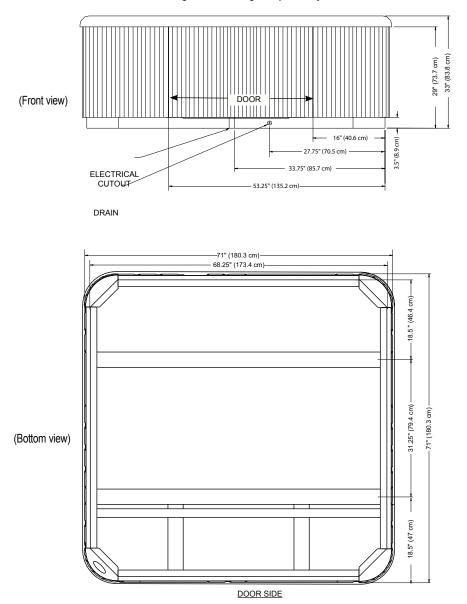

NOTE: Watkins Manufacturing Corporation recommends that the SX be installed on a minimum 4" (10.2cm) thick reinforced concrete pad or structurally sound deck able to support the "dead weight" found in the spa specification chart.


IMPORTANT: THE SX MUST NOT BE SHIMMED IN ANY MANNER.



TX (Model TX)

Dimensions

NOTE: All dimensions are approximate; measure your spa before making critical design or pathway decisions.

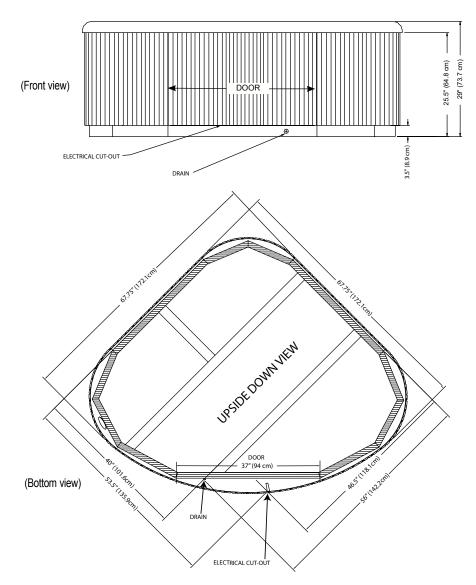

NOTE: Watkins Manufacturing Corporation recommends that the TX be installed on a minimum 4" (10.2cm) thick reinforced concrete pad or structurally sound deck able to support the "dead weight" found in the spa specification chart.

IMPORTANT: THE TX MUST NOT BE SHIMMED IN ANY MANNER.

ELECTRICAL REQUIREMENTS

SELECTING THE VOLTAGE FOR YOUR SPA

The TX operates on 115 volts 15 amp and the SX operates on 115 volts 20 amp 60 Hz. Both the SX and TX can also be converted to either 115 volt 30 amp or 230 volt 50 amp. The Tempo®, Relay® and Rhythm® models require a dedicated 230 volt power supply. When the TX or SX spas are connected to 115 volts 15/20 amp, the heater will provide approximately 1000 watts of heat only when the pump is operating in LOW speed and the thermostat is calling for heat. When the TX or SX spas are connected to 115 volts 30 amp, the heater will provide approximately 1000 watts of heat only when the pump is operating in LOW speed and the thermostat is calling for heat. When the TX or SX spas are connected to 115 volts 30 amp, the heater will provide approximately 1000 watts of heat when the pump is operating in LOW or HIGH speed and the thermostat is calling for heat. When the TX or SX are connected to 230 volts 50 amps, the heater will provide approximately 4000 watts of heat when the pump is operating in LOW or HIGH speed and the thermostat is calling for heat.


All electrical connections must be made in accordance with the wiring information contained in the electrical control box or on the back of the field wiring access panel of the equipment module.

STANDARD, CORD-CONNECTED 115 VOLT 15 OR 20 AMP CONFIGURATION

For your safety, if you are having an electrician install an electric outlet for the spa it should be no closer than 5 feet (152.4cm) and no further than 10 feet (304.8cm) from the spa. [Reference National Electrical Code 680 - 6a(1) and 680 - 41a.]

One GFCI is used in the cord-connected 15 or 20 amp configuration. The GFCI module is located at the end of the power cord. To test the GFCI, simply press the TEST button. The GFCI should trip to the "off" position, disconnecting power to the spa. To reset the GFCI, press the RESET button. The GFCI should reset, and power should be restored to the spa. If the GFCI does not function in this way, unplug the cord and contact an authorized Hot Spot[®] spa service technician.





NOTE: Consult your local code authority to determine if an electrical outlet with a cover is required for your installation. If it is, a suitable outlet cover may be purchased from your authorized Hot Spot dealer.

115 VOLT 20 AMP ELECTRICAL REQUIREMENTS

The SX spa model must be connected to a 115 volt, 20 amp grounded circuit. The equipment pack requires a MINIMUM of 104 volts under load. A dedicated circuit is required; the term "dedicated" means the electrical circuit is not being used for any other high-load electrical items (patio lights, appliances, garage circuits, etc.). If the spa is connected to a non-dedicated circuit, overloading will result in "nuisance tripping" of the internal fuses or of the breaker switch at the house electrical breaker panel.

The circuit must be properly wired; that is, it must have the following:

 Standard (cord-connected) 115 volt 20 amp (SX model) – A minimum 20 amp GFCI circuit breaker in the house panel, #12 AWG or larger wire (including the ground wire) and the correct polarity throughout the circuit.

In addition to the dedicated 20 amp, 115 volt GFCI protected circuit, your spa requires a 20 amp single receptacle. This receptacle, which contains an outdoor-rated, weather-resistant receptacle cover plate, will be provided to you. The single receptacle and cover plate should be installed by your electrician prior to the delivery of your spa.

A pressure wire connector is provided on the exterior surface of the spa's electrical control box, located inside the equipment compartment. This is to permit the connection of a bonding ground wire between this point and any metal equipment, enclosures, pipe or conduit within five feet of the spa (if needed to comply with local building code requirements). The bonding wire must be at least a #8 AWG copper wire.

NEVER CONNECT THE SPA TO AN EXTENSION CORD!


Each SX spa comes equipped with approximately 15 feet of usable power cord (this is the maximum length allowed by regulatory standards and the National Electric Code). The power cord is stored for shipping inside the spa. To

remove the power cord, open the equipment compartment and locate the cord. Carefully pull the cord out of the equipment compartment to the desired length.

NOTE: Canadian regulations prevent SX or TX spas to come with a power cord. and are require to be wired directly to the power source. Use Canadian Electrical Codes for electrical installation.

115 VOLT 30 AMP CONVERSION (SX & TX SPA MODELS)

To ensure you will have an opportunity to use your spa soon after delivery, it is very important that the required electrical service has been installed. Unless otherwise stipulated by your dealer, **THIS IS YOUR RESPONSIBILITY. IMPORTANT:** All electrical circuits must be installed by a qualified, licensed electrician.

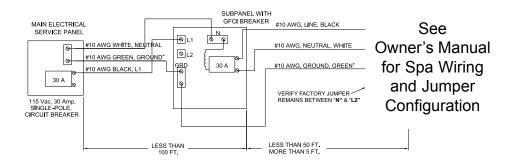


230 VOLT INSTALLATION (TEMPO®, RELAY® & RHYTHM® AND OPTIONAL FOR SX & TX CONVERTED SPA MODELS)

Your spa contains a control box designed to operate at 230V, 60Hz. Installation of a 50 amp. dedicated circuit is required for Tempo, Relay & Rhythm spas and optional for SX & TX spas. The control box must be hard wired directly to a subpanel protected by a Ground Fault Circuit Interrupter (GFCI). The subpanel containing GFCI breakers is included with the Tempo, Relay & Rhythm spa models only. Purchase the subpanel from you dealer for SX and TX models when converting to 230 volts.

IMPORTANT NOTE: All

electrical connections to the control box must be accomplished by a qualified electrician in accordance with the National Electrical Code and in accordance with any local electrical codes in effect at the time and place of installation.

All electrical connections must be made in accordance with the wiring information contained in this manual and on the back of the

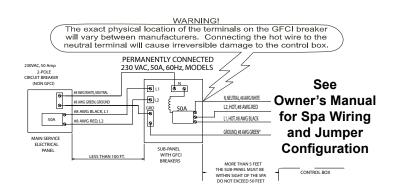

field wiring access panel of the control box. A licensed electrician should install a four-wire electrical service (two line voltages, one neutral, one ground) from the main electrical service panel to the subpanel.

Your electrician should mount the subpanel in the vicinity of the spa but it should not be closer than five (5) feet from the spa water edge (NEC 680-38 to 41-A-3).

Page 10

INSTALLATION NOTE: After the spa has been installed, your electrician can connect the conduit from the subpanel to the spa's control box and then complete the wiring connections in the control box. **NOTE:** Complete step-by-step Installation and Wiring Instructions for all models are included in the Owner's Manual.

WARNING: Removing or bypassing the GFCI breakers in the subpanel at any time will result in an unsafe spa and will void the warranty.

SPA SPECIFICATIONS

CONTRACTOR SUGGESTIONS

-



ADDITIONAL PRODUCTS AVAILABLE FROM YOUR HOT SPOT[®] SPA DEALER


- EverFresh[®] water care system
- FreshWater[®] water care products
- Vanishing Act[®] Calcium Remover
- Clean Screen[®] Pre-Filter
- Vinyl covers
- Spa vacuums
- Stain kits
- Spa upgrade jet kits
- Replacement filter cartridges
- Pillows (Tempo[®], Relay[®] & Rhythm[®] spa models only)
- Spa Steps

Retractable cover system with clearance requirements (Tempo, Relay & Rhythm spa models only)

- Cover Cradle[®] 24" Clearance required
- Cover Cradle II 24" Clearance required
- UpRite[®] 7" Clearance required
- Lift 'n Glide[®] 7" Clearance required

Music systems (Tempo, Relay & Rhythm spa models only)

• Integrated MP3 Player



SERVICES AVAILABLE FROM YOUR HOT SPOT® SPA DEALER Service Cost

Pre-Delivery site inspection		
Unwrap spa and haul away packaging material Set up & level spa Fill the spa with water Connect the spa to its power source (115 Volt 20 amp models) Explain and test the spa's operation Jet system Jet system Set temperature control Control panel functions Explain the safety features GFCI Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Mater spa total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review Winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Pre-Delivery site inspection	
Set up & level spa	Deliver spa to installation site	
Fill the spa with water	Unwrap spa and haul away packaging material	
Connect the spa to its power source (115 Volt 20 amp models)	Set up & level spa	
Explain and test the spa's operation Jet system Air Control system Set temperature control Control panel functions Explain the safety features GFCI Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Fill the spa with water	
Jet system Air Control system Set temperature control Control panel functions Explain the safety features GFCI Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Water quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Connect the spa to its power source (115 Volt 20 amp models)	
Air Control system Set temperature control Control panel functions Explain the safety features GFCI Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Water quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review Winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Explain and test the spa's operation	
Set temperature control Control panel functions Explain the safety features GFCI Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Jet system	
Control panel functions Explain the safety features GFCI Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Mater quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Air Control system	
Explain the safety features • GFCI • Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Set temperature control	
GFCI Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Control panel functions	
Heater high limit General spa operation & maintenance orientation Water quality and maintenance orientation Adjust the water's Total Alkalinity, Calcium Hardness and pH Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Explain the safety features	
General spa operation & maintenance orientation	• GFCI	
Water quality and maintenance orientation	Heater high limit	
Adjust the water's Total Alkalinity, Calcium Hardness and pH	General spa operation & maintenance orientation	
Sanitize the water Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Water quality and maintenance orientation	
Inspect the spa cover, place on spa and install cover locks Review winterizing instructions Review Owner's Manual & Warranty Card Follow-up call In-store spa water analysis	Adjust the water's Total Alkalinity, Calcium Hardness and pH	
Review winterizing instructions	Sanitize the water	
Review Owner's Manual & Warranty Card	Inspect the spa cover, place on spa and install cover locks	
Follow-up call	Review winterizing instructions	
In-store spa water analysis	Review Owner's Manual & Warranty Card	
	Follow-up call	
	In-store spa water analysis	
	TOTAL COST	

Spa Specifications

Teoloning Cooloning Freesions Freesions Freesions Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Mater Dry weight Fileol weight Fileol weight Fileol weight Fileol weight Fileol weight									
Tempo [®] (TEM) Seating (6 Adults)	89"x 89" 2.26m x 2.26m	38" .97m	65 Square feet 6m²	4,000	400 Gallons 1514 litres	911 lbs. 413 kg	5,297 lbs. 2,403 kg	120 lbs. per square foot	230 volt, 50 amp Single phase GFCI circuit
Relay [®] (REL) Seating (6 Adults)	84"x 84" 2.13m x 2.13m	36" .91m	65 Square feet 6m²	4,000	360 Gallons 1363 litres	836 lbs. 379 kg	4,888 lbs. 2,217 kg	120 lbs. per square foot	230 volt, 50 amp Single phase GFCI circuit
Rhythm™ (RHY) Seating (7 Adults)	84"x 84" 2.13m x 2.13m	36" .91m	65 Square feet 6m²	4,000	375 Gallons 1420 litres	847 lbs. 384 kg	5,200 lbs. 2,358 kg	125 lbs. per square foot	230 volt, 50 amp Single phase GFCI circuit
SX** (SX) Seating (4 Adults)	72"x 72" 1.83m x 1.83m	33" .84m	30 Square feet 2.79m ²	1,000 or 4,000 @ 230V	285 Gallons 1078 litres	718 lbs. 326 kg	3,620 lbs. 1,642 kg	130 lbs. per square foot	115 volt, 20 amp Dedicated GFCI protected cord or 230 volt, 50 amp Single phase GFCI circuit
TX** (TX) Seating (2 Adults)	68.5" x 68.5" 1.74m x 1.74m	29" .74m	30 Square feet 2.79m ²	1,000 or 4,000 @ 230V	140 Gallons 530 litres	526 lbs. 239 kg	2,044 lbs. 927 kg	100 lbs. per square foot	115 volt, 15 amp Dedicated GFCI protected cord or 230 volt, 50 amp Single phase GFCI circuit

CAUTION: Watkins Manufacturing suggests a structural engineer or contractor be consulted before the spa is placed on an elevated deck.

- * **NOTE:** The "Filled weight" and "Dead weight" of the spa includes the weight of the max. occupants (assuming an average occupant weight of 175 lbs).
- ** NOTE: This spa may also be converted to a 115 volt, 30 amp Single phase GFCI circuit

NOTES:			





WATKINS MANUFACTURING CORPORATION 1280 Park Center Drive Vista, California 92081 (800) 999-4688 extension 8432

©2013 Watkins Manufacturing Corporation. Hot Spot, Hot Spring, Tempo, Relay, Rhythm, Cover Cradle, UpRite, Lift 'n Glide, EverFresh, FreshWater, Vanishing Act, Clean Screen and The Home Relaxation Specialists are trademarks of Watkins Manufacturing Corporation.